


# Induction Cooktop 30"

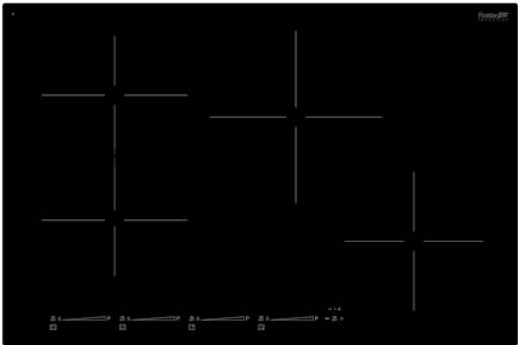

Induction Cooktops

Code: 7371 947

Black ceramic glass  
9 settings plus powerboost  
4 slider commands



## DETAILS

Coloring	Black
Material	Ceramic glass
Dimensions	30 45/64" x 20 15/32"
Edge/Installation Type	For flush-mount or over-mount installation
Heating element	Four zones
Cut out	29 1/2" x 19 5/16"
Electrical supply	220-240 V — 50/60 Hz
Max power	7.400 W - 32 A

Recommended circuit breaker 40 A

Left 8 <sup>3</sup>/<sub>4</sub>" x 7" - 2,100 W (3,700 Booster)

Up-left 8 <sup>3</sup>/<sub>4</sub>" x 7" - 2,100 W (3,700 Booster)

Right Ø 8 <sup>1</sup>/<sub>4</sub>" - 2,300 W (3,700 Booster)

Up-right Ø 10 <sup>1</sup>/<sub>4</sub>" - 2,600 W (3,700 Booster)

Power settings 9 power settings per zone + Powerboost

Safety Safety equipment

Type Induction Hob

Type of commands Touch Control

## FEATURES

**Powerboost** Booster function provides increased power to the selected plate. In particular, when the Booster is activated, the plate works for ten minutes at a very high power that allows to heat quickly large quantities of water.

**Slider commands** The Slider control allows for extremely quick temperature setting: with a light touch of the finger you may select the desired power level on the TOUCH display.

**Bridge zone** The new cooktops with Bridge function allow to associate two zones forming a single extended cooking zone for pots of large size, or for more than one cooking simultaneously, with maximum flexibility in pot positioning. With the additional Double Booster feature provided by all Bridge cooktops, the exceptional 3700 W power can be concentrated on a single plate or made available uniformly over the enlarged area.

## T-chef function

It's a function that allows to set particular temperatures (42 °C, 70 °C, 94 °C) and keep them constant during cooking. Elaborate preparations can be easily obtained, with chef-like results. Cooking in a bain-marie, without the aid of a double container for the water, custard or cream sauce will thus always be perfect. By setting the temperature close to boiling, liquids will immediately reach the requested temperature, increasing speed and performance.

---

## Pause

Useful function that allows you to distract your attention from cooking, interrupting and restoring the settings immediately.

---

## Go&stop function

This device initially turns on the plates at maximum power until the selected temperature has been reached.

---

## Recall

This feature allows you to call back the last settings selected in the previous cooking.

---

## Timer

Indipendent timer from the end-of-cooking function.


---

## Safety


All electric cooker hobs feature the most modern and sophisticated safety protections: Centralised power-off function; Child-proof safety lock; Residual heat warning lights. Induction models feature the following functions: Safety System that turn off the hob in the absence of the pot; Overflow detector that automatically turns off the plate in case of liquid overflow; Automatic deactivation to prevent accidents caused by forgetfulness.

---

## TECHNICAL DATA

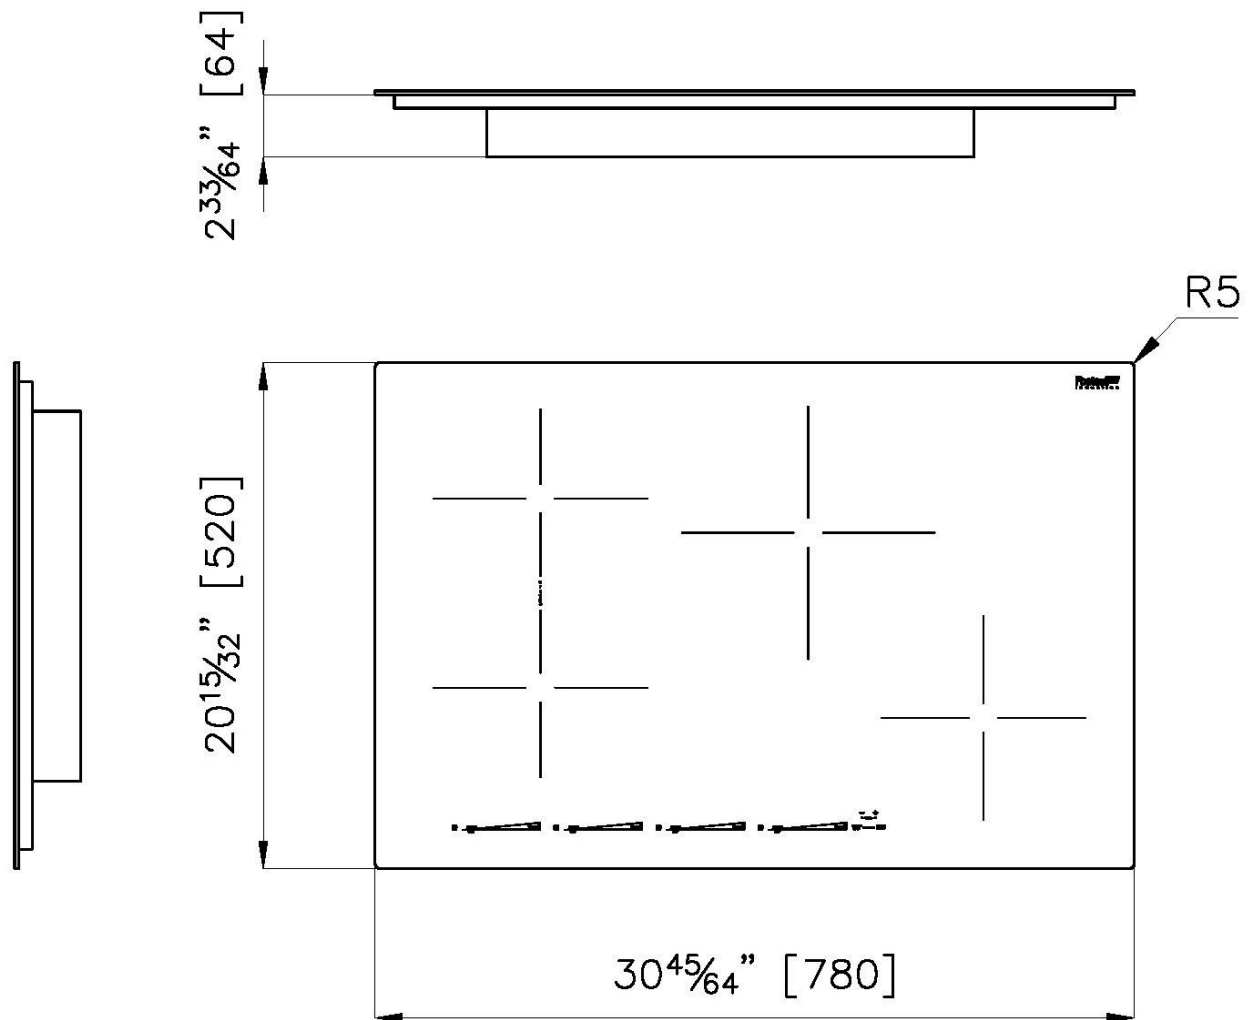

## GALLERY

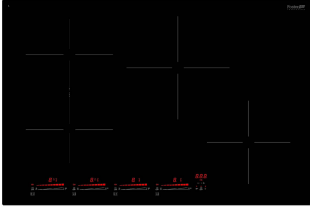

## RECOMMENDED PAIRINGS



**Sink Leonardo 40" x 20" – U/M**  
1015 660